




**WILBUR CURTIS COMPANY, INC.**

## Service Manual - Cafe Pourover

### SETUP STEPS



**CAUTION** – This brewer is shipped with the thermostat turned ON. DO NOT plug in unit before pouring 3 pots or 192 oz. of water into the opening (see step 4, below); damage to the heating element or thermostat will result.

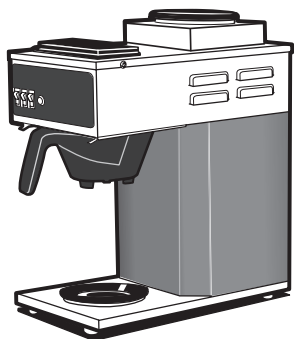


#### MODELS INCLUDED

- CAFE 1DB
- CAFE 2DB
- CAFE 3DB
- CAFE AP
- CAFE 0PP



**CAUTION:** Please use this setup procedure before attempting to use this brewer. Failure to follow the instructions can result in injury or the voiding of the warranty.

1. Place the coffee brewer on a solid, level counter top, near a 120 VAC outlet rated at 20 amps. Do not plug in the power cord at this time.
2. Place an empty glass decanter on the warmer deck, under the sprayhead.
3. Insert the empty brew cone into the brew rails of the brewer.
4. Slowly fill the tank with room temperature water through the opening on the top cover until water starts running in a steady stream from the brewcone (3 pots or 192 ounces). This indicates that the tank is full.
5. Plug the power cord into a 120V electrical outlet.
6. Allow the brewer to heat up to full temperature, indicated by the green Ready to Brew light. This takes about 15 to 25 minutes the first time the coffee brewer is plugged in. Slight dripping from the brewcone is normal as the tank heats up.

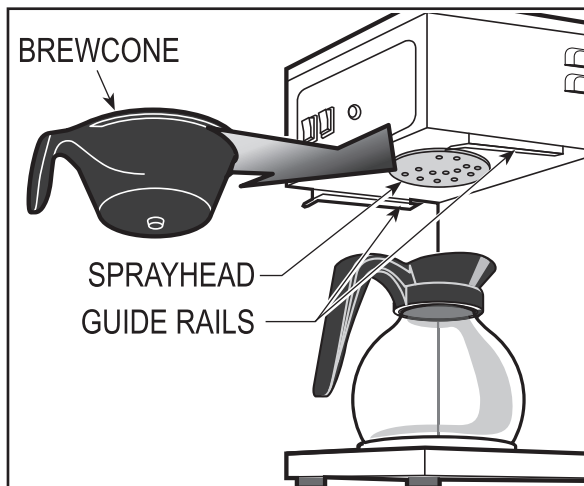

This appliance is designed for commercial use. Any servicing other than cleaning and maintenance should be performed by an authorized Wilbur Curtis company service center.

- Do not immerse the unit in water or any other liquid
- To reduce the risk of fire or electric shock, do not open top panel. No user serviceable parts inside. Repair should be done only by authorized service personnel.
- Keep hands and other items away from hot parts of unit during operation.
- Never clean with scouring powders or harsh implements.

ISO 9001:2008 REGISTERED


WILBUR CURTIS CO., INC.  
6913 West Acco Street  
Montebello, CA 90640-5403  
For the latest information go to  
[www.wilburcurtis.com](http://www.wilburcurtis.com)  
Tel: 800-421-6150  
Fax: 323-837-2410

FOR THE LATEST SPECIFICATIONS AND INFORMATION GO TO [WWW.WILBURCURTIS.COM](http://WWW.WILBURCURTIS.COM)


## BREWING INSTRUCTIONS




1. Pour the proper amount of ground coffee into the filter and place it into the brew cone. Shake the brew cone to even the coffee bed.

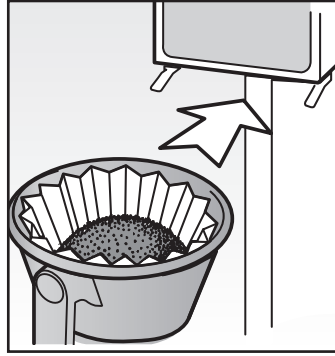

2. Slide brew cone into guide rails (Fig. 1., pg 1). Place a clean empty decanter on the warmer plate (model Café AP uses an airpot).

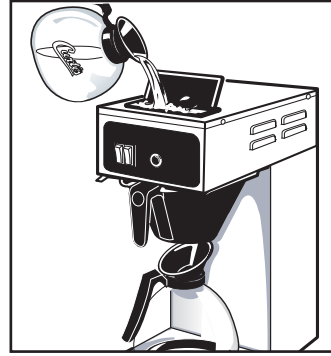

3. When the green Ready to Brew light comes on, pour 64 ounces or one decanter of room temperature water into opening on the top cover. The brew time will be about three minutes.

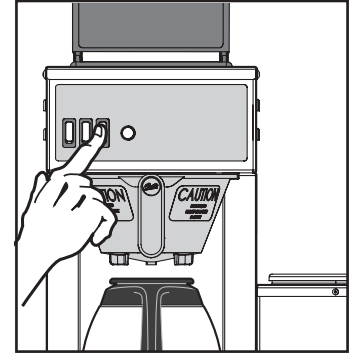

4. Switch on the warmer plates to keep the coffee at serving temperature.



**CAUTION: HOT LIQUID. AVOID SCALDING.** The brew cone contains hot coffee grounds. Allow brewcone to drain before removing.



**NOTE:** Due to evaporation, water may be lost from the tank if brewer is left on for long periods of time without making coffee. When this occurs, pour in enough water to refill the heating tank before brewing.




**NOTE:** You should have at least two decanters for brewing coffee. One for pouring water, the other to brew coffee into. With airpot brewers, a pitcher that holds 74 ounces is required.


## ILLUSTRATED PARTS



**NOTE:** Items, called out in this illustration, are specific to Café 1DB, Café 3DB & Café AP. All other parts are common.

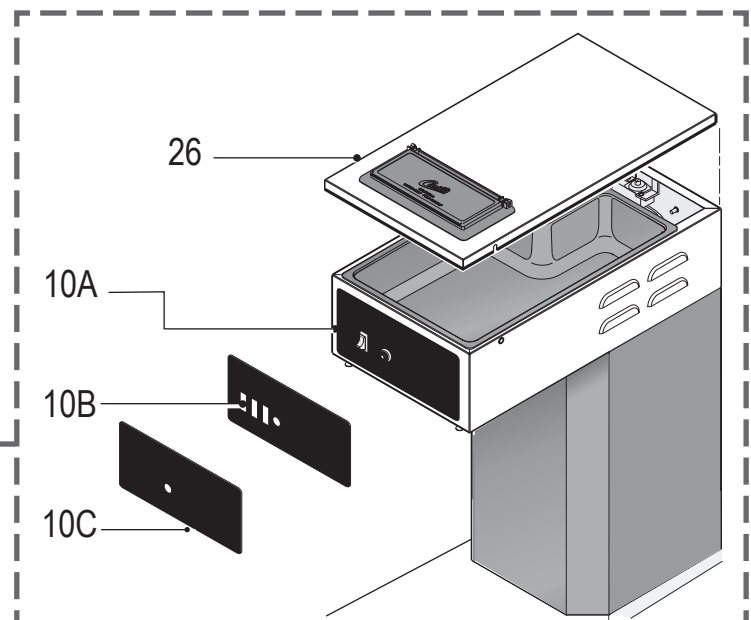

# ILLUSTRATED PARTS

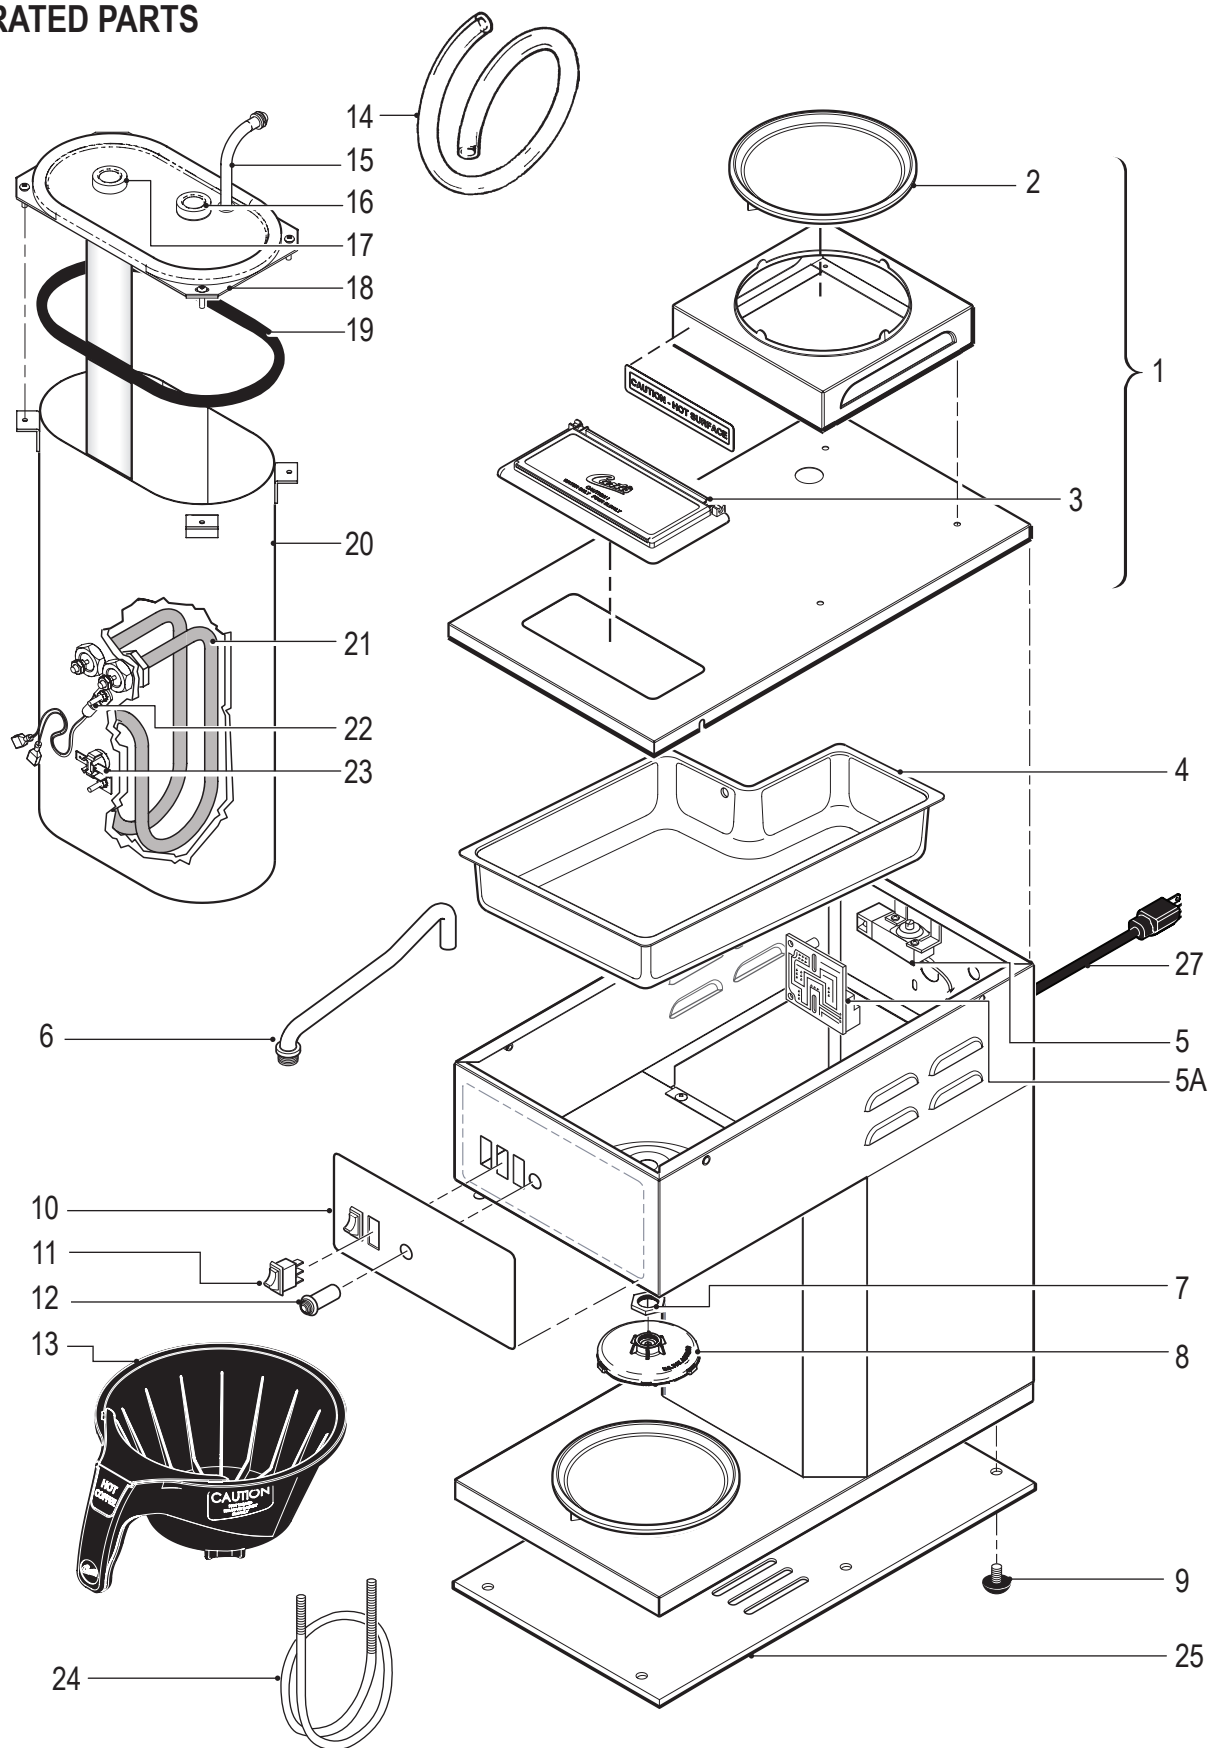

PARTS LIST ON PAGE 4

## PARTS LIST

| ITEM № | PART №       | DESCRIPTION  |
|--------|--------------|--|
| 1      | WC-68101     | TOP WARMER ASSY, 120V (CAFÉ 2DB)                             |
| 1A     | WC-68103     | TOP WARMER ASSY, 220V (CAFÉ 2DB)                             |
| 2      | WC-37135     | WARMER ASSY 100W 120V w/PLATE                                |
| 2B     | WC- 975      | WARMER ASSY, COMPLETE 100W 220V                              |
| 3†     | WC-54118     | TRAY ASSY POUROVER   |
| 4†     | WC-54121     | PAN, POUR CAFE'  |
| 5      | WC- 504      | THERMOSTAT CAPILLARY (EXPORT MODELS)                         |
| A†     | WC- 735-101  | THERMOSTAT, TEMP CONTROL 120V                                |
| 6†     | WC-29054     | TUBE, CAFÉ SPRAYHEAD/SYPHON                                  |
| 7      | WC-4213      | NUT, 5/8-18 JAM BRASS  |
| 8†     | WC-29025     | SPRAYHEAD, PURPLE ASF  |
| 9      | WC-3502      | LEG, SCREW BUMPER  |
| 10     | WC-39372     | LABEL, SW PANEL CAFÉ 1DB (ON/OFF SW)                         |
| 10A    | WC-39373     | LABEL, SW PANEL CAFÉ 2DB (ON/OFF SW)                         |
| 10B    | WC-39374     | LABEL, SW PANEL CAFÉ 3DB (ON/OFF SW)                         |
| 10C    | WC-39371     | LABEL, SW PANEL CAFÉ AP (ON/OFF SW)                          |
| 11†    | WC- 165      | SWITCH, WARMER RED 115V                                      |
| 11A    | WC- 166      | SWITCH, WARMER (RED) 250V                                    |
| 11B    | WC- 137*     | SWITCH, WARMER RED 220V (OLDER UNITS)                        |
| 12     | WC- 207      | LIGHT, BREW 115V GREEN                                       |
| 12A    | WC- 208      | LIGHT, BREW 250V GREEN                                       |
| 13     | WC-3621-101  | BREW CONE, ASSY W/SPLASH POCKET                              |
| 14†    | WC-5310      | TUBE, 5/16 ID X 1/8 W SILICONE                               |
| 15     | WC-29042     | HOSE, VENTILATION HEATING TANK                               |
| 16     | WC-2627      | GROMMET, COVER HEATING TANK                                  |
| 17     | WC-2628      | BUSHING, CONICAL.47 ID x .95 OD x .99L 8mm                   |
| 18     | WC-54125-101 | COVER, TOP HEATING TANK                                      |
| 19†    | WC-43062     | GASKET, TANK LID   |
| 20     | WC-54117     | TANK, COMPLETE 1450W 120V                                    |
| 20A    | WC-54145     | TANK, COMPLETE 3500W 240V                                    |
| 21†    | WC- 917-04   | ELEMENT, HEATING 1.45KW 120V W/JAM NUTS & SILICONE WASHERS   |
| 21A    | WC- 906-04   | KIT, ELEMENT, HEATING 2KW 220V W/ JAM NUT & SILICONE WASHERS |
| 22†    | WC-1438-101  | SENSOR, TEMPERATURE TANK                                     |
| 23†    | WC- 523*     | THERMOSTAT, MANUAL RESET                                     |
| 23A    | WC- 521      | THERMOSTAT, , AUTO RESET                                     |
| 24     | WC-3645      | SPRING, DELIMING CAFE SERIES                                 |
| 25     | WC-73106     | COVER, BOTTOM  |
| 26     | WC-68102     | COVER ASSY, TOP (CAFÉ 1DB, 3DB, AP                           |
| 27     | WC-1200      | CORD, 14/3 SJTO 6' BLK W/PLUG                                |
| 27A‡   | WC-1246-101  | CORD, 16A 250V BLK WITH CONNECTORS                           |

\* Component Used on Older Units

† Suggested Parts to Stock


‡ Power Cord Used on CAFE2DB30A024 Only

## THERMOSTAT ADJUSTMENT

The Cafe coffee brewer is factory set to 200°F. The brewer can be adjusted on the thermostat for a tank temperature of either 200°F or 190°F.

### To adjust:

1. Unplug the unit at the power cord.
2. Remove the back cover, held by four screws.
3. Locate the thermostat, attached to a bracket below the top wrap. There will be a pair of contacts covered with a black plug (see photo, right, 200°F). This is where the tank temperature selection is made. Removing the black plug changes the setting to 190°F. Covering the contacts will return the setting to 200°F. To avoid losing the small black cover, slip the cover over one of the contacts as shown in photo at right.
4. Return cover to the back of the unit and plug electrical cord into the power outlet.

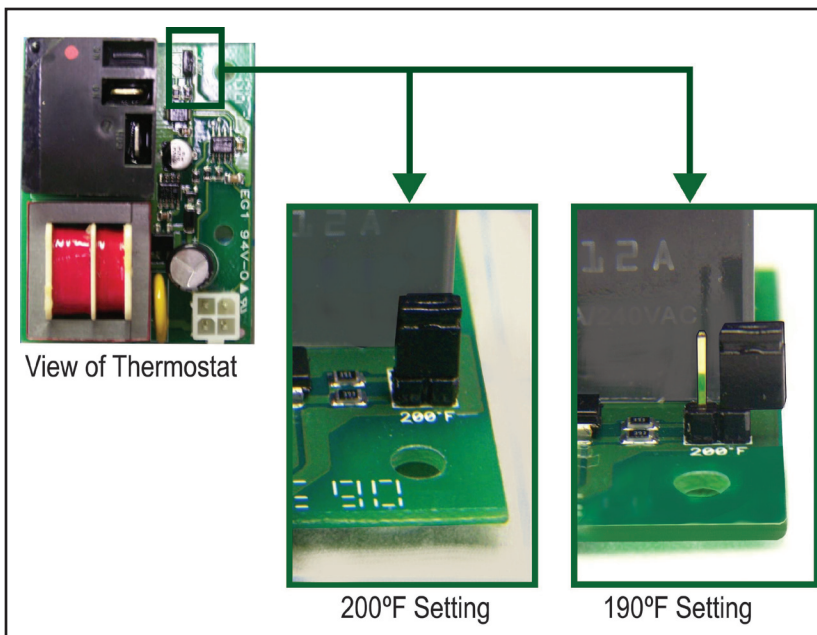

## CLEANING

Regular cleaning of your Curtis Cafe coffee brewer will maintain the highest quality coffee your equipment is capable of producing. Proper cleaning is essential in maintaining the fresh and appealing appearance of your coffee service.

1. First turn off the brewer, unplugging the cord at the power outlet.
2. Avoid touching hot surfaces. Allow the warmer plates to cool.



**CAUTION** - Do not use cleansers, liquid bleach, powders or any other substance that contains chlorine. These products promote corrosion and will pit the stainless steel. THE USE OF THESE PRODUCTS WILL VOID YOUR WARRANTY.

3. Wipe all exterior surfaces with a damp cloth. Remove spills, dried coffee, coffee grounds, etc.
4. Slide the brewcone out and wipe the sprayhead area with a cloth dampened with a mild dish soap solution.
5. Wash the brewcone and wire brew basket, if applicable. Use a soft bristled brush for hard to clean areas. Wash both parts with a detergent solution or put these parts through a dishwasher.
6. Wash glass decanters with dish soap. To remove mineral deposits, soak with vinegar.
7. Dry all exterior surfaces of the unit with a clean soft cloth to keep water from spotting the cabinet.


**NOTE** - Polish the outside stainless steel surfaces with stainless steel polish after drying. This will prevent surface scratches and result in a cleaner appearance.

## DE-LIMING

Every six months, more often in areas with extremely hard water, the inside of the heating tank should be de-limed.



**CAUTION** - The de-liming procedure must be performed by a qualified service technician.

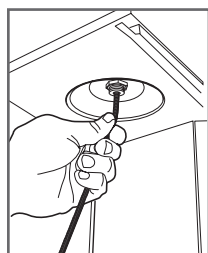

**DE-LIMING SPRING** This spring is for cleaning lime deposits from within the siphon tube. Remove the sprayhead. Insert spring into the siphon tube.

Twist the spring clockwise as you push inward. Once past the bend in the tubing, you can slide it back and forth to remove hard lime deposits.

# ELECTRICAL LADDER DIAGRAM – 120V

Brewer Model Café 1DB, 2DB, 2DBS, 3DB & AP (All 120VAC Units)

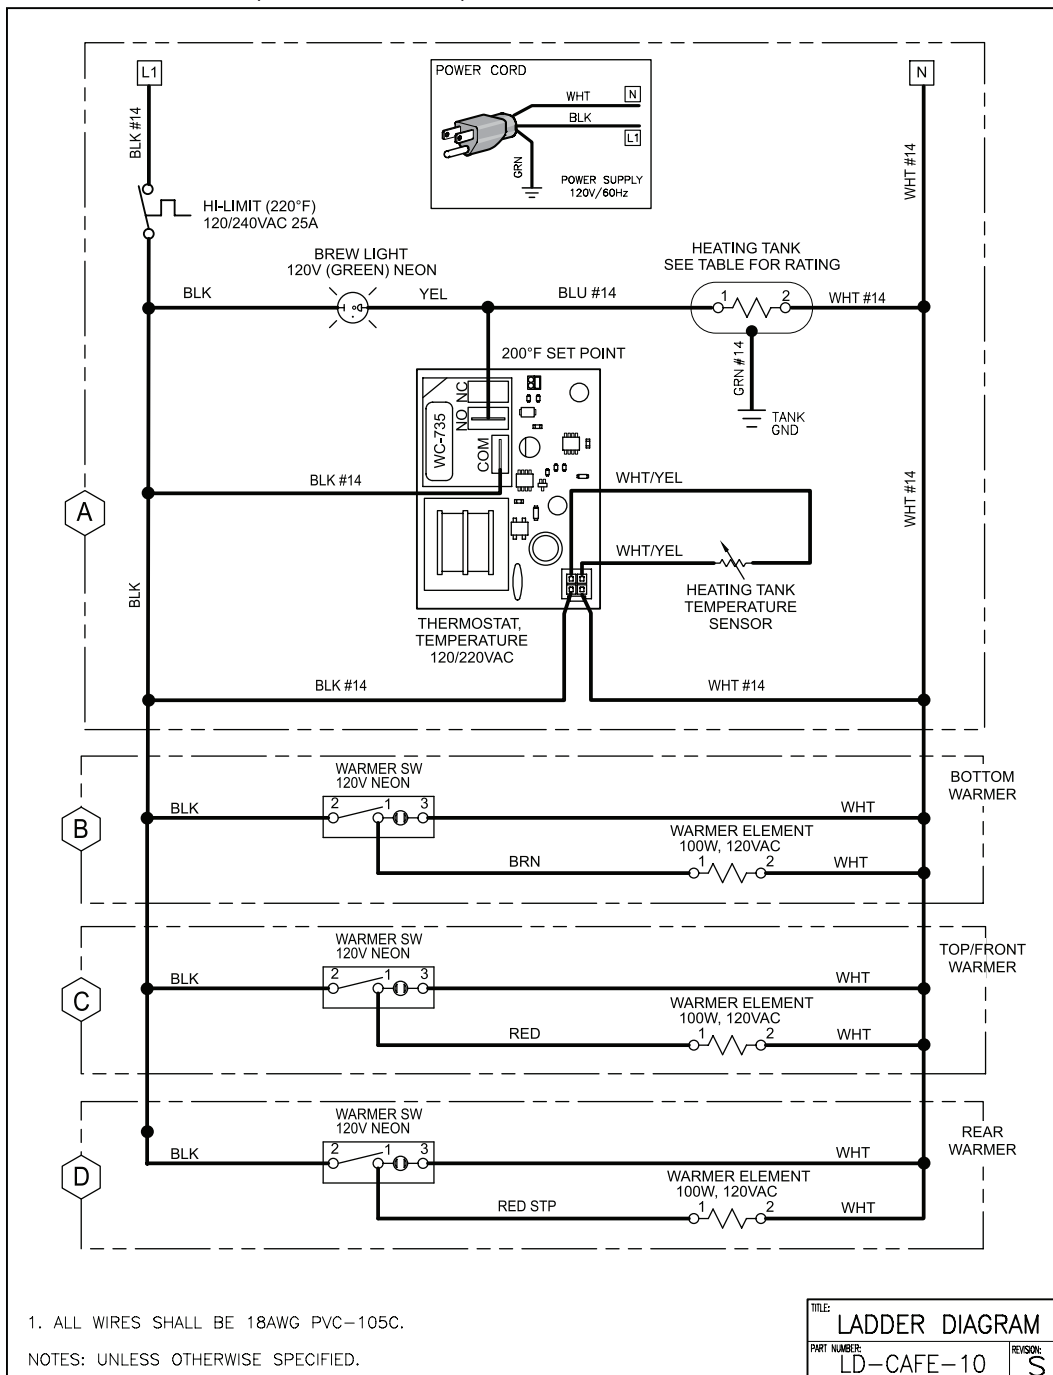


Table 1. MODEL & ELECTRICAL (All 120VAC Units)

| MODEL      | HEATING ELEMENT | CIRCUIT       | VOLTS  | WATTS | AMPS  | HERTZ   | WIRE   | PHASE   |
|------------|-----------------|---------------|--------|-------|-------|---------|--------|---------|
| CAFE0AP10  | WC-917          | A             | 120VAC | 1450W | 12.1A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE1DB10  | WC- 917         | A + B         | 120VAC | 1550W | 12.9A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE2DB10  | WC- 917         | A + B + C     | 120VAC | 1650W | 13.8A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE2DBS10 | WC- 917         | A + B + C     | 120VAC | 1650W | 13.8A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE3DB10  | WC- 917         | A + B + C + D | 120VAC | 1750W | 14.6A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE0PP10  | WC- 917         | A             | 120VAC | 1450W | 12.1A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE1DB20  | WC- 933         | A + B         | 120VAC | 1250W | 10.4A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE2DB20  | WC- 933         | A + B + C     | 120VAC | 1350W | 11.3A | 50/60HZ | 2W + G | 1-PHASE |
| CAFE3DB20  | WC- 933         | A + B + C + D | 120VAC | 1450W | 12.1A | 50/60HZ | 2W + G | 1-PHASE |

# ELECTRICAL LADDER DIAGRAM – 220V

Brewer Model Café 1DB, 2DB, 3DB & AP (All 208-240VAC Units)

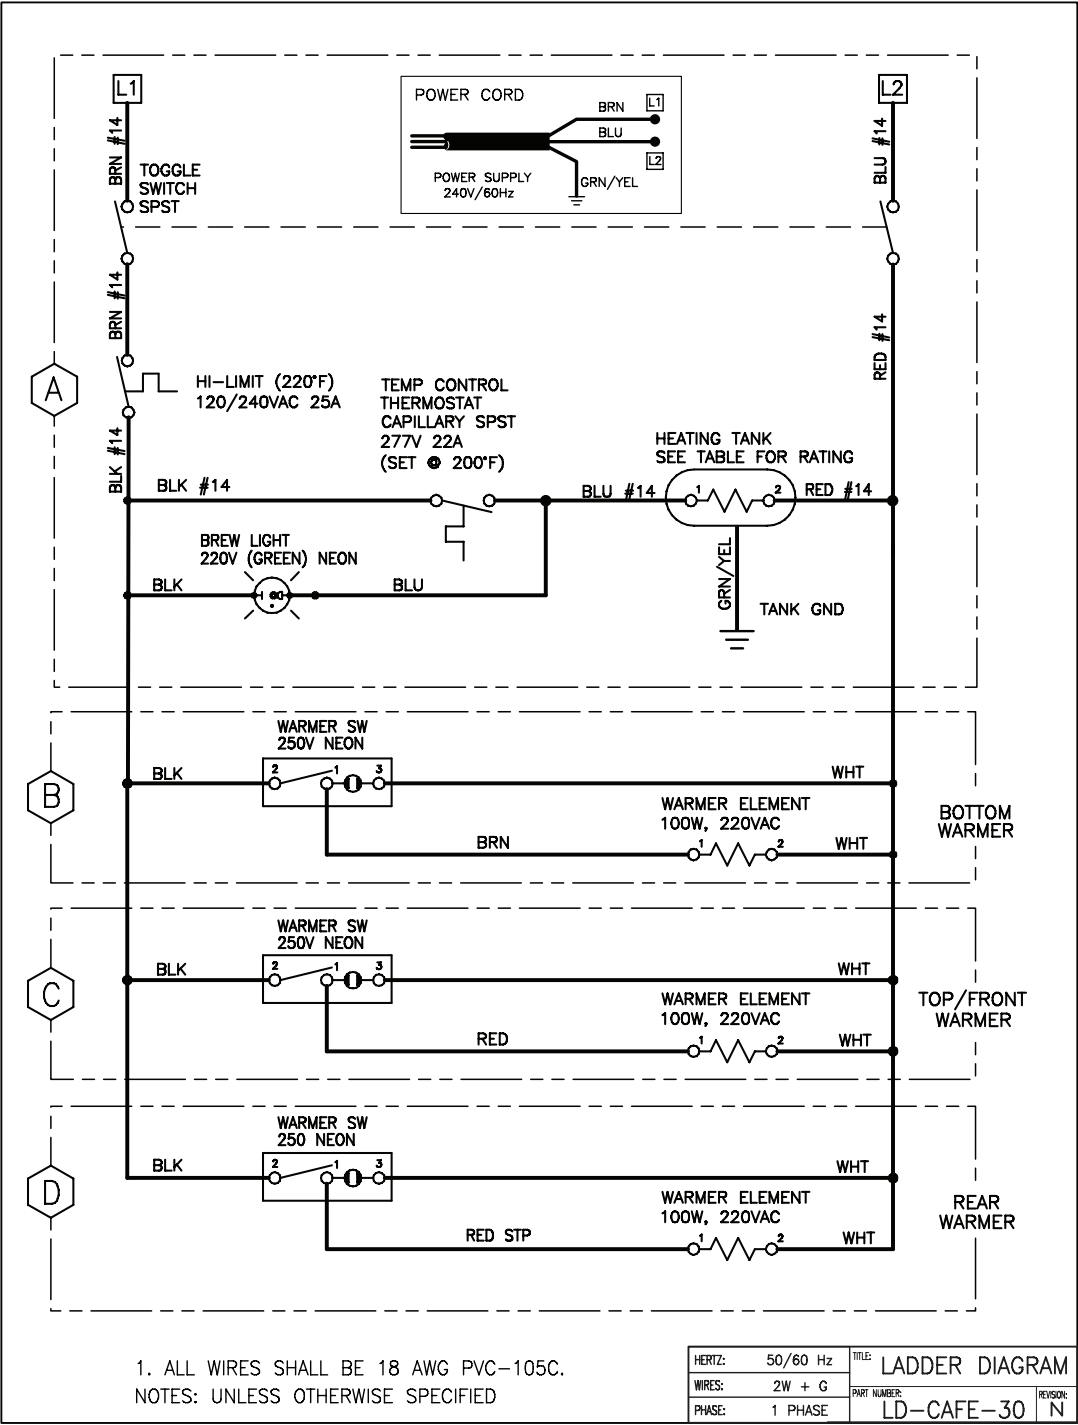


Table 2. MODEL & ELECTRICAL (All 208-240VAC Units) “Export Only”

| MODEL AND ELECTRICAL TABLE |                 |               |        |       |      |
|----------------------------|-----------------|---------------|--------|-------|------|
| MODEL                      | HEATING ELEMENT | CIRCUIT       | VOLTS  | WATTS | AMPS |
| CAFE0AP30                  | WC- 906         | A             | 240VAC | 2000W | 8.3A |
| CAFE1DB30                  | WC- 906         | A + B         | 240VAC | 2100W | 8.8A |
| CAFE2DB30                  | WC- 906         | A + B + C     | 240VAC | 2200W | 9.2A |
| CAFE3DB30                  | WC- 906         | A + B + C + D | 240VAC | 2300W | 9.6A |



## Product Warranty Information

The Wilbur Curtis Company certifies that its products are free from defects in material and workmanship under normal use. The following limited warranties and conditions apply:

- 3 Years, Parts and Labor, from Original Date of Purchase on digital control boards.
- 2 Years, Parts, from Original Date of Purchase on all other electrical components, fittings and tubing.
- 1 Year, Labor, from Original Date of Purchase on all electrical components, fittings and tubing.

Additionally, the Wilbur Curtis Company warrants its Grinding Burrs for Forty (40) months from date of purchase or 40,000 pounds of coffee, whichever comes first. Stainless Steel components are warranted for two (2) years from date of purchase against leaking or pitting and replacement parts are warranted for ninety (90) days from date of purchase or for the remainder of the limited warranty period of the equipment in which the component is installed.

All in-warranty service calls must have prior authorization. For Authorization, call the Technical Support Department at 1-800-995-0417. Effective date of this policy is April 1, 2003.

Additional conditions may apply. Go to [www.wilburcurtis.com](http://www.wilburcurtis.com) to view the full product warranty information.

### CONDITIONS & EXCEPTIONS

The warranty covers original equipment at time of purchase only. The Wilbur Curtis Company, Inc., assumes no responsibility for substitute replacement parts installed on Curtis equipment that have not been purchased from the Wilbur Curtis Company, Inc. The Wilbur Curtis Company will not accept any responsibility if the following conditions are not met. The warranty does not cover and is void under the following circumstances:

- 1) **Improper operation of equipment:** The equipment must be used for its designed and intended purpose and function.
- 2) **Improper installation of equipment:** This equipment must be installed by a professional technician and must comply with all local electrical, mechanical and plumbing codes.
- 3) **Improper voltage:** Equipment must be installed at the voltage stated on the serial plate supplied with this equipment.
- 4) **Improper water supply:** This includes, but is not limited to, excessive or low water pressure, and inadequate or fluctuating water flow rate.
- 5) **Adjustments and cleaning:** The resetting of safety thermostats and circuit breakers, programming and temperature adjustments are the responsibility of the equipment owner. The owner is responsible for proper cleaning and regular maintenance of this equipment.
- 6) **Damaged in transit:** Equipment damaged in transit is the responsibility of the freight company and a claim should be made with the carrier.
- 7) **Abuse or neglect (including failure to periodically clean or remove lime accumulations):** Manufacturer is not responsible for variation in equipment operation due to excessive lime or local water conditions. The equipment must be maintained according to the manufacturer's recommendations.
- 8) **Replacement of items subject to normal use and wear:** This shall include, but is not limited to, light bulbs, shear disks, "O" rings, gaskets, silicone tube, canister assemblies, whipper chambers and plates, mixing bowls, agitation assemblies and whipper propellers.
- 9) **Repairs and/or Replacements** are subject to our decision that the workmanship or parts were faulty and the defects showed up under normal use. All labor shall be performed during regular working hours. Overtime charges are the responsibility of the owner. Charges incurred by delays, waiting time, or operating restrictions that hinder the service technician's ability to perform service is the responsibility of the owner of the equipment. This includes institutional and correctional facilities. The Wilbur Curtis Company will allow up to 100 miles, round trip, per in-warranty service call.

**RETURN MERCHANDISE AUTHORIZATION:** All claims under this warranty must be submitted to the Wilbur Curtis Company Technical Support Department prior to performing any repair work or return of this equipment to the factory. All returned equipment must be repackaged properly in the original carton. No units will be accepted if they are damaged in transit due to improper packaging. **NO UNITS OR PARTS WILL BE ACCEPTED WITHOUT A RETURN MERCHANDISE AUTHORIZATION (RMA). RMA NUMBER MUST BE MARKED ON THE CARTON OR SHIPPING LABEL.** All in-warranty service calls must be performed by an authorized service agent. Call the Wilbur Curtis Technical Support Department to find an agent near you.

ECN 15344 . 9/19/13 @ 10.0 . rev U



### WILBUR CURTIS CO., INC.

6913 Acco St., Montebello, CA 90640-5403 USA

Phone: 800/421-6150

Fax: 323-837-2410

Technical Support Phone: 800/995-0417 (M-F 5:30A - 4:00P PST)

Web Site: [www.wilburcurtis.com](http://www.wilburcurtis.com)

Email: [techsupport@wilburcurtis.com](mailto:techsupport@wilburcurtis.com)

FOR THE LATEST SPECIFICATIONS AND INFORMATION GO TO [WWW.WILBURCURTIS.COM](http://WWW.WILBURCURTIS.COM)