

DIRECT SUPPLY

PARTS CATALOG



Panacea Air APL Mattress

Table of Contents

Page Title	Page No.
Title Page	1
Table of Contents	2
Top Cover (Photo)	3
Top Cover	4
Bottom Cover (Photo)	5
Bottom Cover	6
Air Cells (Photo)	7
Air Cells	8
Foam Base (Photo)	9
Foam Base	10
Anchor Sheet (Photo)	11
Anchor Sheet	12
Internal Manifold (Complete) (Photo)	13
Internal Manifold (Complete)	14
Air APL Controller Diagram	15
Air APL Controller Diagram Chart	16
Pump Parts & Miscellaneous Parts – Page 1	17
Miscellaneous Parts – Page 2	18

Panacea Air APL Mattress Top Cover





Panacea Air APL Mattress Top Cover

Item Number	Description
2880-PI013575	APL Mattress Top Cover – (35" x 75")
2880-PI013575F	APL Mattress Top Cover W/ Fire Barrier – (35" x 75")
2880-PI013580	APL Mattress Top Cover – (35" x 80")
2880-PI013580F	APL Mattress Top Cover W/ Fire Barrier – (35" x 80")

Panacea Air APL Mattress Bottom Cover





Panacea Air APL Mattress Bottom Cover

Item Number	Description
2880-PI023575	APL Mattress Bottom Cover – (35" x 75")
2880-PI023580	APL Mattress Bottom Cover – (35" x 80")

Panacea Air APL Mattress Air Cells





Panacea Air APL Mattress Air Cells


Item Number	Description
2880-PI03835	APL Mattress Air Cell
2880-PI03835L	APL Mattress Air Cell W/ LAL Holes

With Micro
LAL Holes



Without Micro
LAL Holes

Panacea Air APL Mattress
Foam Base

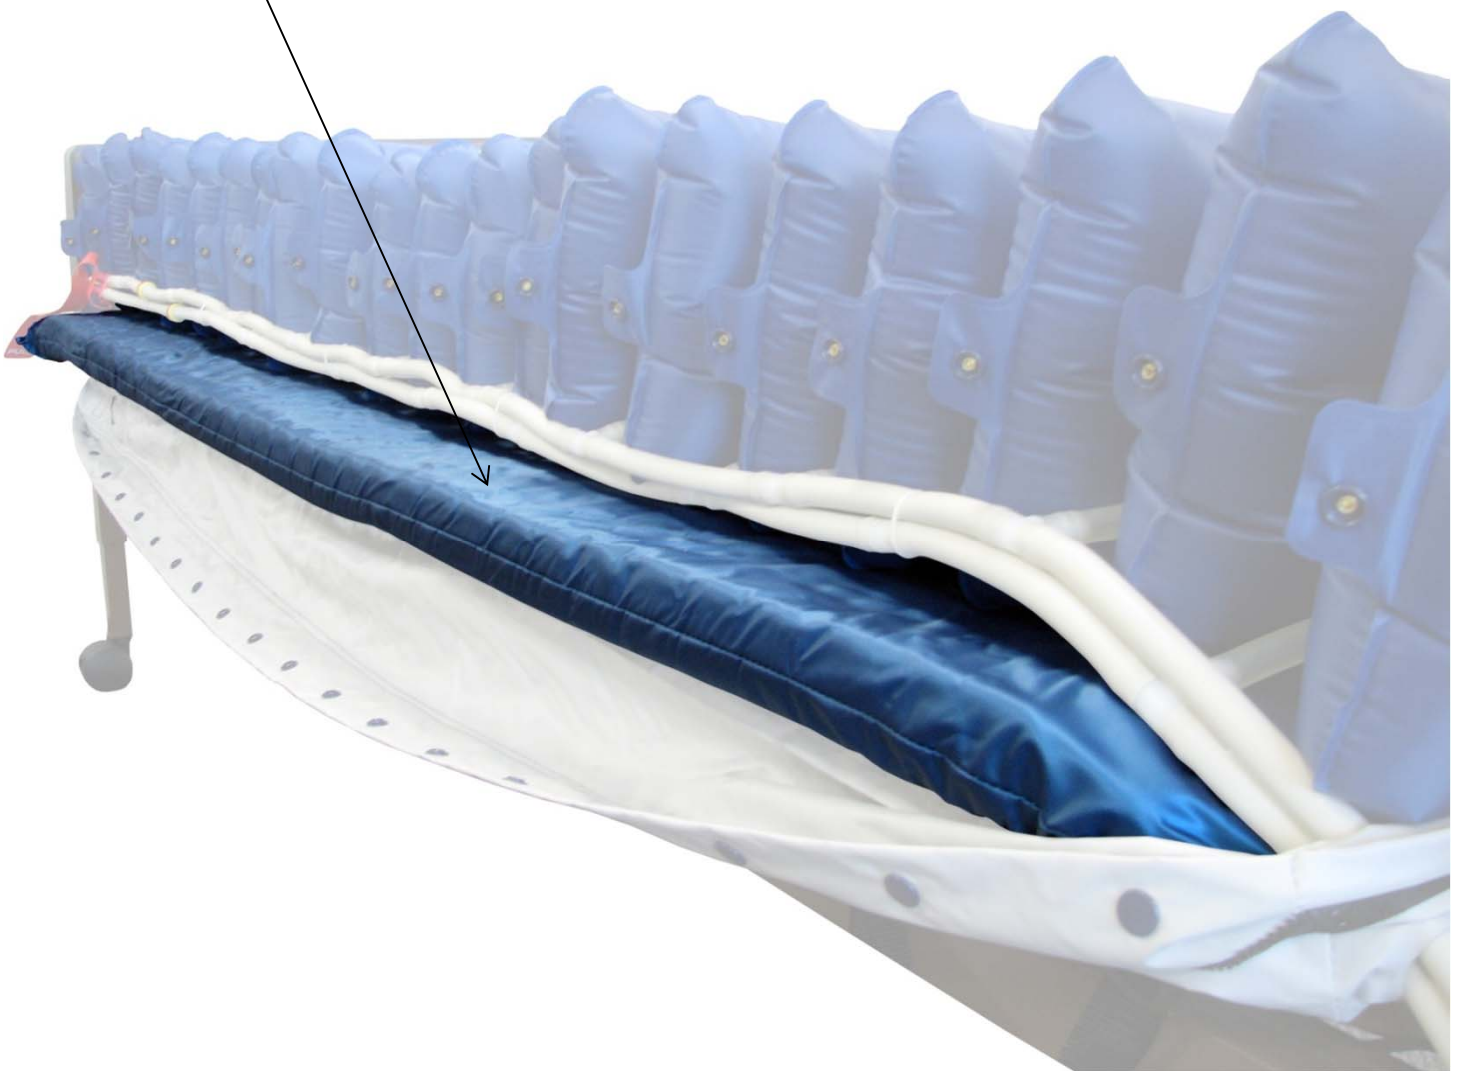



Panacea Air APL Mattress Foam Base

Item Number	Description
2880-PI043575	Vinyl Covered Foam Base – (35" x 75")
2880-PI043580	Vinyl Covered Foam Base – (35" x 80")

Panacea Air APL Mattress Anchor Sheet






Panacea Air APL Mattress Anchor Sheet

Item Number	Description
2880-AA0575	APL Mattress Anchor Sheet – (35" x 75")
2880-AA0580	APL Mattress Anchor Sheet – (35" x 80")


Panacea Air APL Mattress
Internal Manifold (Complete)

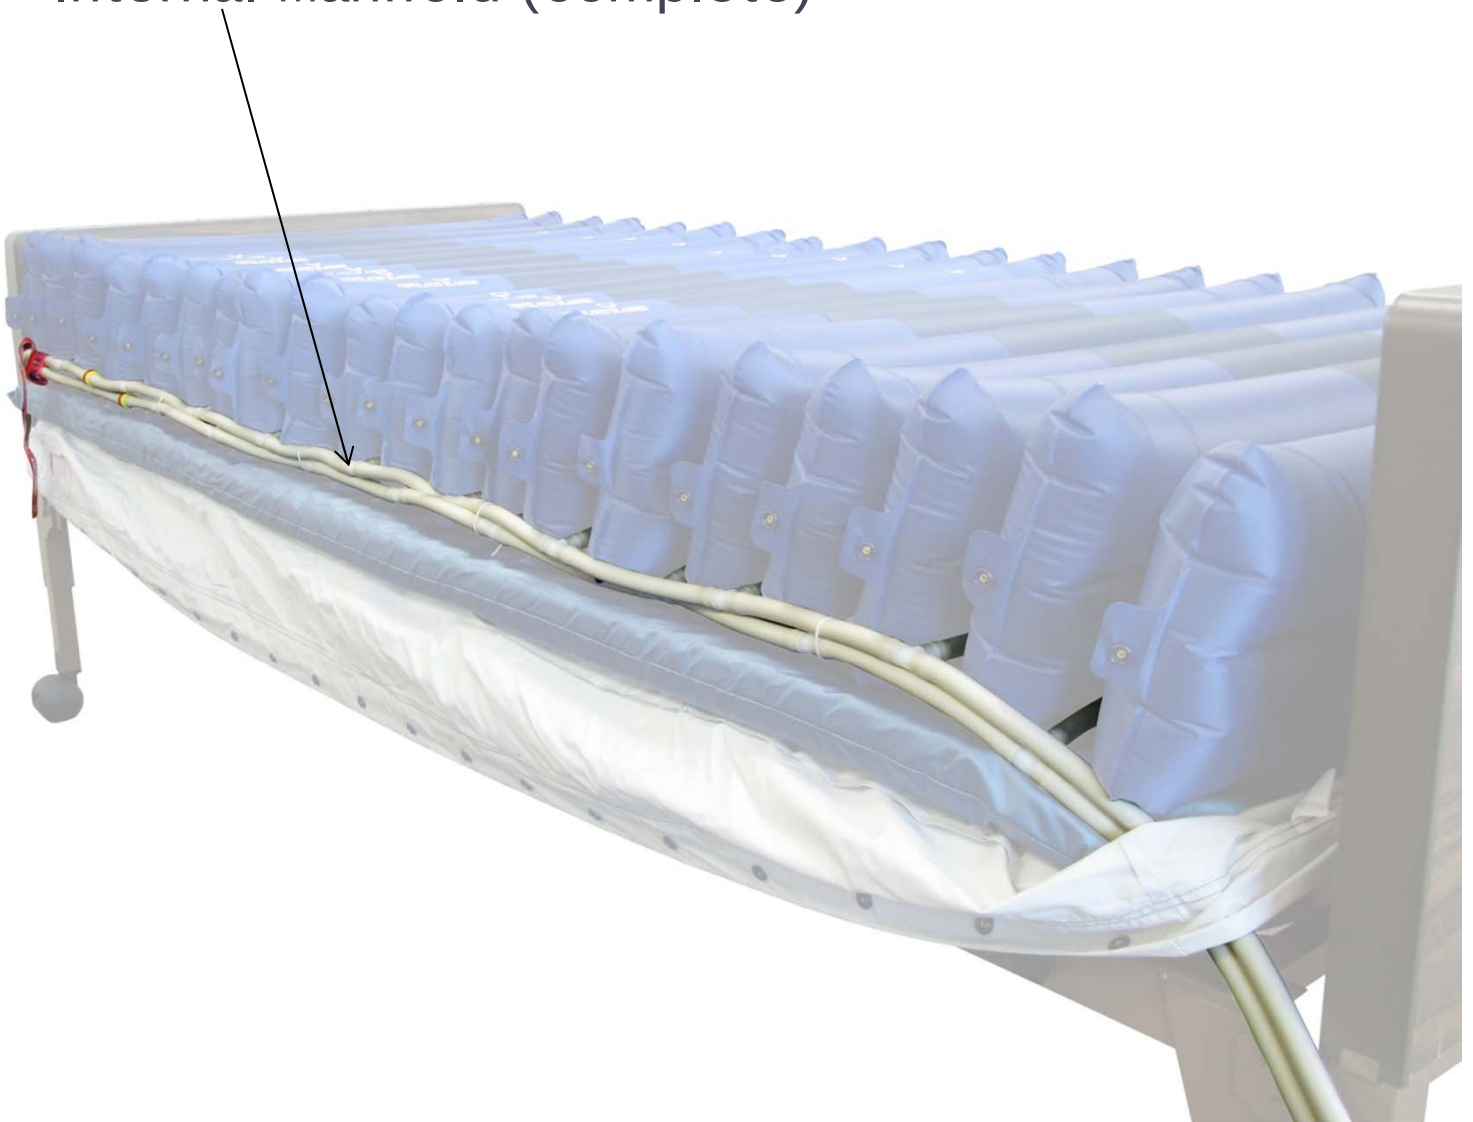




Panacea Air APL Mattress Internal Manifold (Complete)

Item Number	Description
2880-PI0675	APL Internal Manifold – 75"
2880-PI0680	APL Internal Manifold – 80"

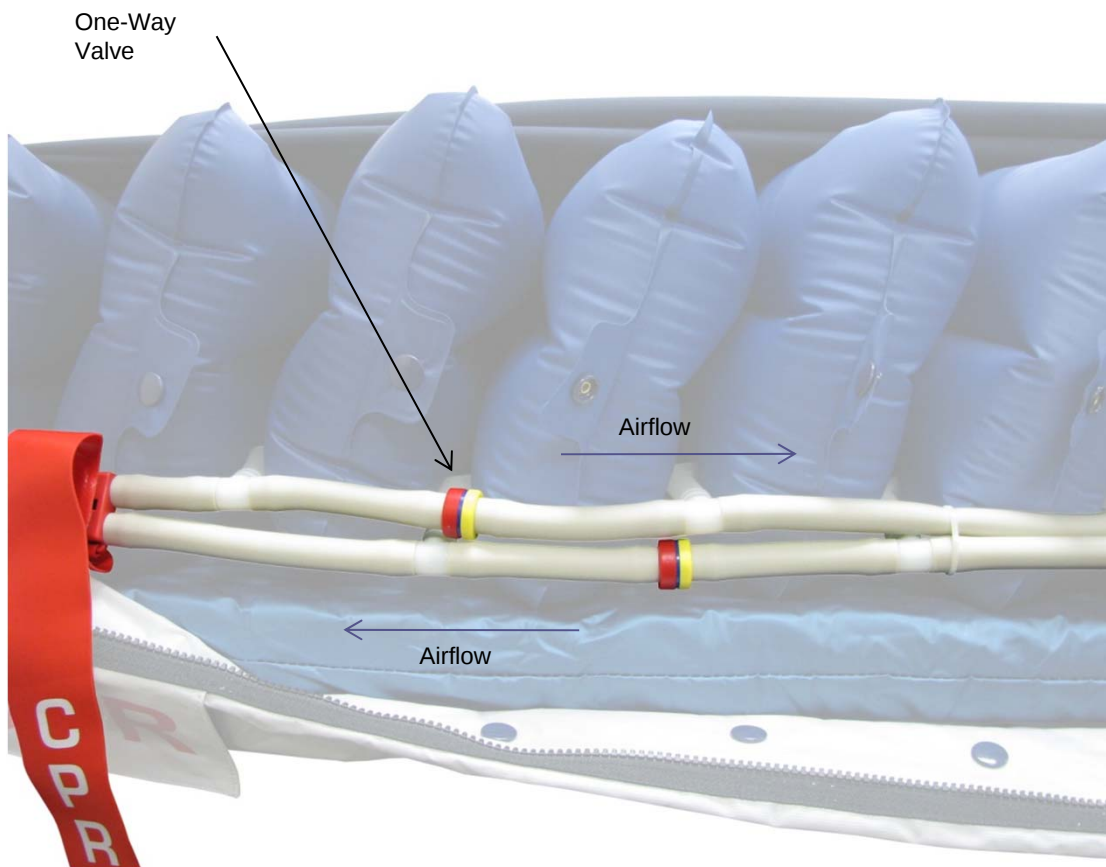

Panacea Air APL Mattress Controller Diagram

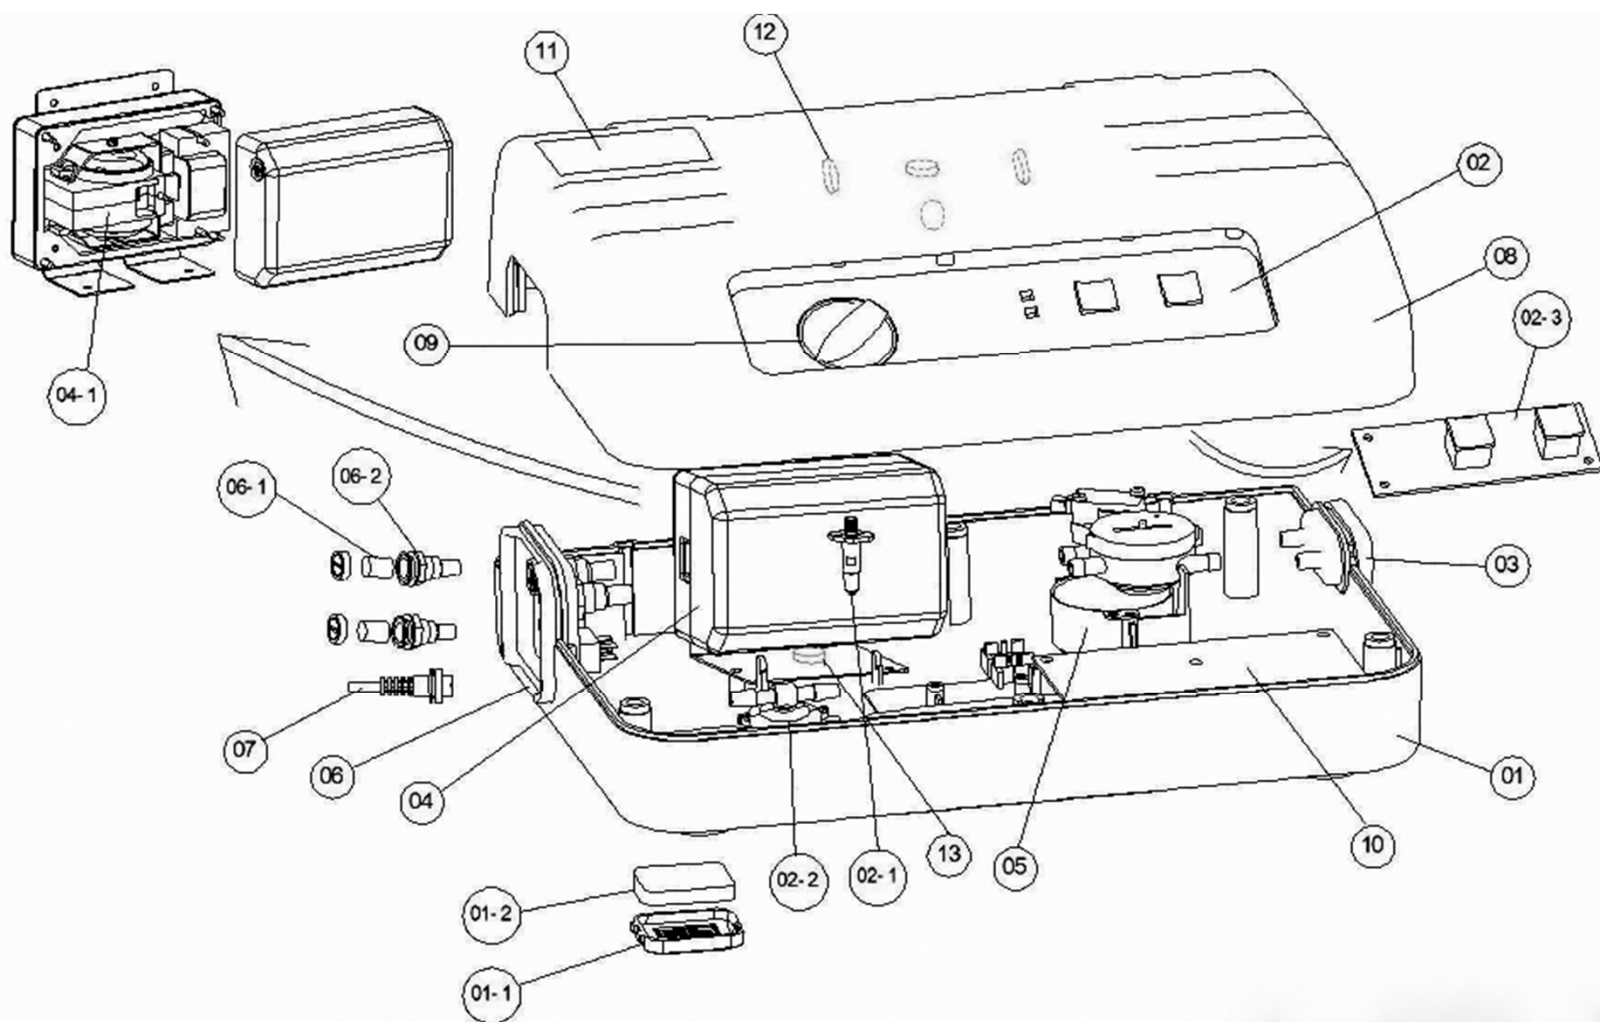

Panacea Air APL Mattress Controller Diagram Chart

No.	Description	Part Number
01	Pump base unit with Legacy Pro instructions print, hangers, PVC caps	Z-APM-LEGACY-BASE
01-1	Fiber cover	Z-APM-FC
01-2	Fiber (3 pcs/ pack)	Z-APM-F
02	Face plate unit Legacy Pro	Z-APM-LEGACY-FP
02-1	Pressure relief valve	Z-APM-PRV
02-2	LED lamp unit 115V	Z-APM-CPSA
02-3	Small PC board	Z-APM-LEGACY-SPCB
03	Quick connector AB outlet, 9mm diameter with tube	Z-APM-FIT
04	Compressor unit 115V/ 60Hz	Z-APM-LEGACY-CCU
04-1	Compressor component 60Hz	Z-APM-CMP
05	Selector unit 115V (1/10 RPM)	Z-APM-LP-TM
06	Power cord holder plate	Z-APM-LEGACY-PCHP
06-1	Fuse	Z-APM-FUSE
06-2	Fuse holder	Z-APM-10000-42-FB
07	Power cord	Z-APM-LEGACY-PC
08	Pump cover	Z-APM-LEGACY-PCOVER
09	Knob	Z-APM-K
10	Big PC board	Z-APM-LEGACY-MPCB
12	Foam (thick)	Z-APM-SIDE-AVT
13	Foam (thin)	Z-APM-SIDE-AV

Panacea Air APL Mattress

Pump Parts & Miscellaneous Parts – Page 1



Item No	Description
2880-AA06-EM	External Manifold (All Matt Sizes)

Item No	Description
200776	3/8" ID x 5/8" OD PVC Tubing



Item Number	Description
00-252-APMQCA	Air APL Pump Connector

Item Number	Description
30LO-6GFBN	3/8" X 3/8" Elbow

Panacea Pulse Advanced Air Miscellaneous Parts – Page 2



Item Number	Description
30TO-6GFBN	3/8" X 3/8" X 3/8" Barbed T



Item Number	Description
30BYFOO6	3/8" X 3/8" X 3/8" Barbed Y



Item Number	Description
30SBC375	3/8" X 3/8" Barbed Straight Connector



Item Number	Description
30CV-38B	3/8" Check Valve