

Adjustable Weighted Utensils


Adjustable Weighted Utensils enable you to increase and reduce the total weight of each utensil. This feature enables clients to adjust the weight of the utensil to suit their comfort level. Washers are provided to give each utensil a weight range from 2 ounces to 8 ounces.

Directions

Simply unscrew the bottom of the utensil to expose a round post that accommodates the washer weights. The weight can be adjusted by either adding or removing the steel washers. The weight can be positioned along the length of the post by utilizing the two enclosed rubber washers.

Cleaning Instructions

Unscrew the base of the utensil and remove washers. The utensil will dry more thoroughly if it is placed vertically in the dishwasher. Dishwasher safe up to 170°.

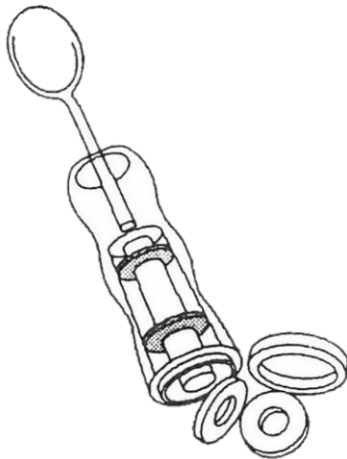

Simply take weight on and off with the adjustable washer mechanism.

Adjustable Weighted Utensils


Adjustable Weighted Utensils enable you to increase and reduce the total weight of each utensil. This feature enables clients to adjust the weight of the utensil to suit their comfort level. Washers are provided to give each utensil a weight range from 2 ounces to 8 ounces.

Directions

Simply unscrew the bottom of the utensil to expose a round post that accommodates the washer weights. The weight can be adjusted by either adding or removing the steel washers. The weight can be positioned along the length of the post by utilizing the two enclosed rubber washers.

Cleaning Instructions

Unscrew the base of the utensil and remove washers. The utensil will dry more thoroughly if it is placed vertically in the dishwasher. Dishwasher safe up to 170°.

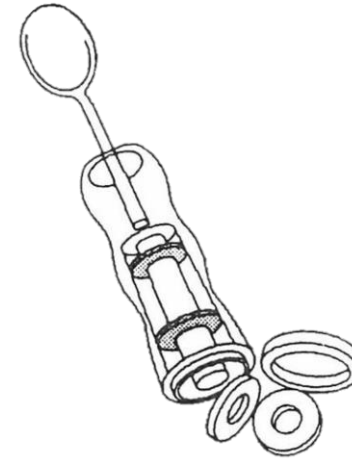

Simply take weight on and off with the adjustable washer mechanism.